

 


TRUSTED SINCE 1992

# 9" JET TURBINE TATAMI FAN

---

## EJF 7981V

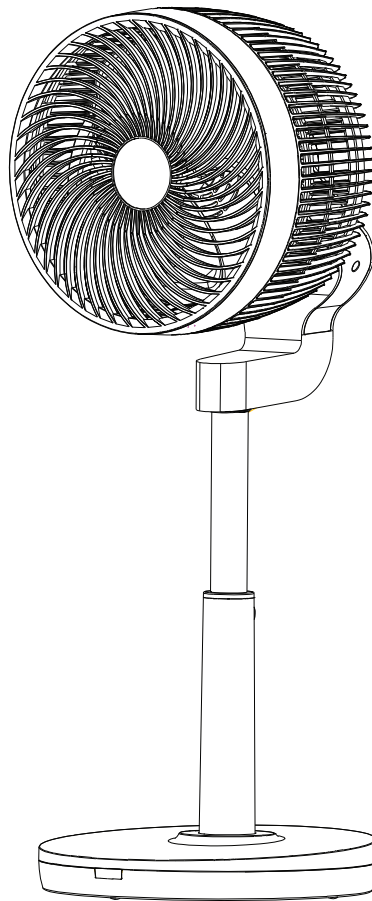

*Celebrate Fine Living!*

Thank you for purchasing EuropAce 9" Oscillating Jet Turbine Fan.  
For safety purpose, please read this operating instruction manual carefully before using and  
keep it for future reference.

## **Warning :**

- This appliance is not intended for the use by persons (including children under 8 years old), with reduced physical, sensory or mental capabilities or lack of experiences and knowledge unless they have been given initial supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Please read and comply with the user manual before the initial operation of your appliance and keep the user manual for later use.
- Do not operate the appliance in a way that does not mentioned in the user manual to avoid an accident.
- Children shall not play with the appliance, power cord, any parts, and accessories at any time. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Never connect to the power supply socket and turn on the appliance if the blades, front/rear guard are not welly assembled to avoid a serious accident.
- Do not turn on the appliance if there is no people's supervision.
- Do not let children and pets get close with it, close adult supervision is necessary when the appliance is used by or near children and pets.
- If the appliance falls, unplug from the power supply socket immediately, place the appliance well on the floor, check all parts to confirm no problems, then the appliance can be used again. If you are not sure the appliance is safe to use, take it to the repair center for checking.
- This appliance is not water-resistant, never immerse the main body, power plug, power cord and remote control in water nor rinse it under the tap to avoid accident. Only use soft dry cloth to clean the main body case.
- This appliance is not water resistance, never use and keep this appliance at or near the bathroom, shower nozzle, swimming pool or outdoor.
- Do not expose the product to high temperatures, hot gas, steam or damp-heat from other sources and under sunlight. Do not place the product on or near an operating or still hot stove or cooker, do not use the appliance under humidity environment.
- Do not place any combustibile and explosion object such as petroleum, paint around the appliance. Do not use the appliance in an area full of combustibile gas. Do not use spray pesticides or other spray items near the appliance.
- Any time when the appliance is operating, do not use anything to cover the front, rear guard and mist outlet.
- When the appliance is operating, do not get close with the front and rear guard to avoid twisting of hair by the blades and get an injury.
- Do not place the appliance near the curtain, clothes to avoid being inhaled and damage the appliance.
- Never put your fingers and other objects into the front and rear guard, or any moving parts of the appliance to avoid injury. Especially take care of children.
- Do not adjust the appliance facing angle horizontally by hands to avoid appliance

damages.

- Do not adjust the facing angle when the appliance is operating, adjust only when the appliance is turned off.
- This appliance must be placed on a level and solid surface.
- Do not carry and move the appliance when operating. To carry and move the appliance, make sure it is turned off and unplug from the power supply socket.

 
### **Caution :**

 
- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the mains cord, the appliance itself, water tanks and mist transfer pipe are damaged to avoid an accident. It must be repaired by our service center to avoid a hazard. Never repair, assembly and re-equip by yourself.
- Never press, roll, bend the power cord, and Keep the power cord away from hot surfaces. Never pull the power cord to avoid loosening. And do not put the power cord under the carpet and any other things to avoid damages
- The power cord must not be stepped or pressed by any things, or bitten by any pets to avoid damages.
- Do not connect with an external timer. This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Do not use the same power sources with other appliances to avoid overload.
- Do not plug or unplug the appliance into the power socket with wet hands.
- Make sure the air circulation is enough when using the appliance.
- If you drop the screw inside the appliance when install or uninstall the front guard, please send the appliance to the service center for checking and handle, do not disassembly the appliance to repair by yourself.
- Do not expose yourself to wild generated by the appliance for a long time, especially elder, children, and sick people, it may cause health-related issues.
- Do not operate the appliance under a humid, dusty environment and surface. And do not keep the appliance under sunlight.
- Do not give impact or fall the appliance and press the front and rear guard to avoid damages and accidents.
- Before cleaning, assembling or disassembling, make sure the appliance is turned off and unplug from the power supply socket, and it is completely cool down.
- Clean the appliance regularly to avoid too many dust on blades, rear and front guard.
- Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- The appliance is mainly for indoor and household use only.
- If the appliance has an abnormal smell, smoke, overheat or abnormal noise or any problems occur, stop using the appliance immediately, unplug from the power supply socket.
- Remote control use one piece battery, if you find the remote control is not function, it

may be battery running out of power, change a new battery immediately.

- If you do not use the appliance for a long period, take the battery out from remote control, keep it at a safe place which is not easily accessed by children and pets.
- Any problem with the product, please call our service center for help.
- All photos are for reference only.

## PARTS DESCRIPTION

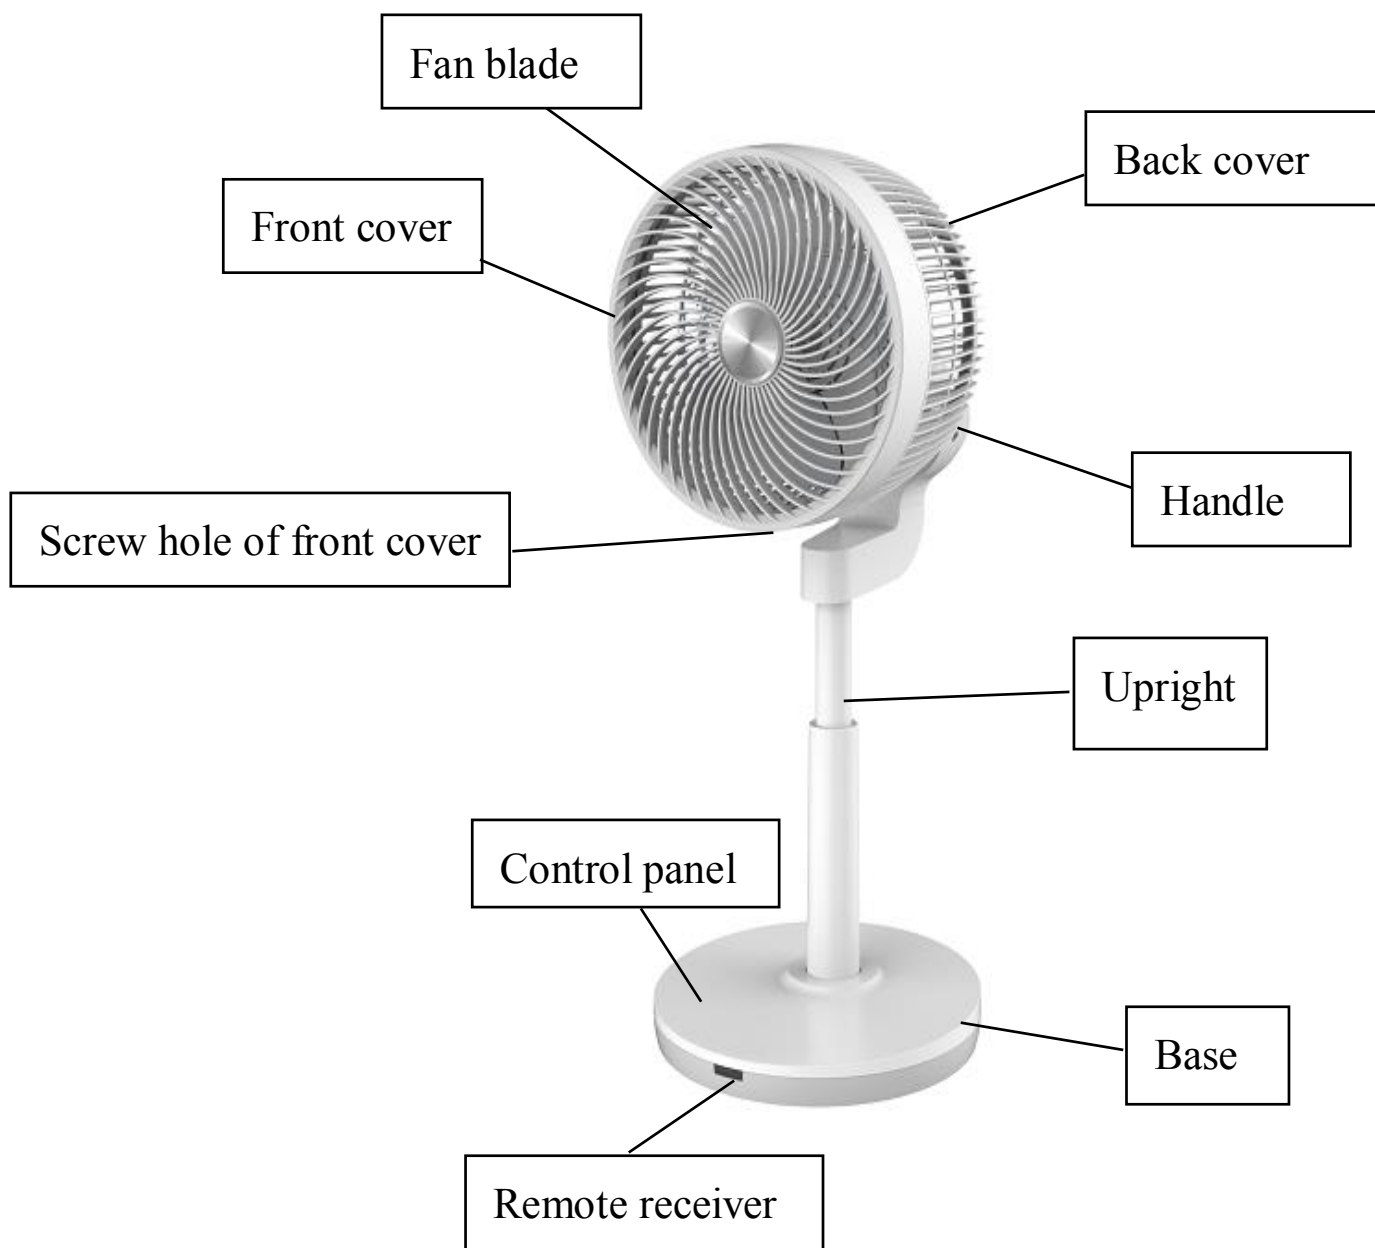

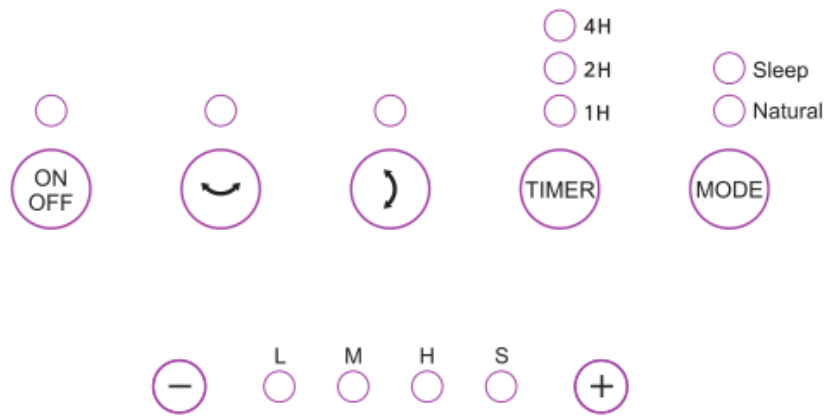

## FAN OPERATION

1. Check the household voltage to ensure it matches the appliance's rated specification. Be sure to plug into a 220-240V~, 50-60Hz outlet.

2. Put in the plug, you can hear “Bi, Bi” then press the “ON/OFF”, the product starts at speed one with a light on.

### 3. SPEED:

The product has 8 speed with 8 LED light. You can adjust the speed by press “-” and “+” key. When you choose a speed, a half-light one. And when you choose it again, the light will on in the form of accumulation. For example, if you choose the first speed, then a half light on; if you chose the second speed, then one light on...

### 4. MODE:

Press “MODE”, you can choose the normal model, natural mode or sleeping mode.

When you choose the natural mode, the Indicator light will on.

If press “MODE” effectively, you can hear a sound “Bi”

### 5. TIMER:


(1) Product has been set on Max 7 hours base on accumulation, it means 1H-2H-3H-4H-5H-6H-7H-0-1H..... such and such.


### 6. CHILD LOCK:

When the product is working, press the “On/Off” for 3 seconds, the “Child Lock” will start working and the On/Off indicator light turns off, other indicator lights keep the original setting. In the case, just the “Child Lock” function can work, others can’t be operated. Press the “On/Off” for 3 seconds again to cancel this function.

When the product is in standby status, press the “On/Off” for 3 seconds, do not start the Child Lock function.

 
## 7. OSC:

(1) Press the “”, the product will oscillate left and right by automatic, and press the second time, will stop this function.

(2) Press the “”, the product will oscillate up and down by automatic, and press the second time, will stop this function.

## 8. Adjust height:

Press the button on the back of upright and then pull up slowly, you can adjust the height you need.

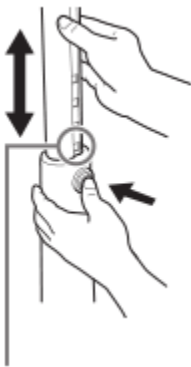

9. If you don't use fan for a long time, please pull out the plug.

## SPECIFICATION

Model	EJF 7981V
Rated voltage	220 -240V~
Rated frequency	50-60Hz
Rated power	30W

## Before First Time Use :

1. Put the appliance on a flat and stable surface.
2. Remove all packing materials.
3. Make sure no power plug connection.
4. Check the front, rear guard, spinner, and blade are welly assembled.
5. Remove the protective plastic sheet from the remote control.

6. Attach the remote control holder on the pillar.

Specifications are subject to change without prior notice.

**Specification :**

Model: EJF 7981V

Power: 30W

Voltage: 220-240V ~

Frequency: 50-60Hz

Accessory: Remote Control

Specifications are subject to change without prior notice.

**If there is any inconsistency or ambiguity between the English and Chinese versions, the Chinese version shall prevail.**

## 警告:

- 一般電器產品並不是為體質、感覺或智力有障礙人士(包括八歲以下兒童)、或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示，大人應指導小孩不可把玩電器。
- 使用前請細閱及了解所有說明書內容，以免誤用產品。閱讀後請保存好說明書作日後參閱。
- 不可對風扇使用說明書上記載以外的方法及用途，以免發生意外。
- 在任何情況下包括使用前、使用中、使用後及存放時，不可讓八歲以下兒童接觸、使用、當玩具把玩、清洗及靠近本風扇、電源線及所有配件，以免發生意外。
- 請勿將包裝袋置於幼兒拿得到的地方。若套穿在頭上等，可能會堵塞口鼻導致窒息死亡。
- 未完全安裝好扇葉、前 / 後網，切勿把電插頭連接電源插座啟動風扇，以免發生嚴重意外。
- 風扇運作時必須有人看管，不要讓小童靠近接觸。
- 在沒有任何人看管的情況下，切勿啟動風扇，以免發生意外。
- 如使用時或放置時不慎把風扇傾倒，請即時先把電插頭拔離電源插座把風扇馬上關掉，把風扇放置好，檢查風扇沒問題才可再次使用。如有任何不確定或疑問請先交往維修中心檢查。
- **本風扇並不防水，切勿把風扇整機、遙控器、電源線和電插頭浸在水中或任何液體裏，也不可將其放在水龍頭下沖洗和被濺水，以免發生意外。機身外殼只能以乾軟布清潔。**
- 本風扇並不防水，切勿把風扇放置在浴室、花灑、洗滌地方、泳池邊附近及室外使用及存放。
- 切勿將風扇放置/靠近明火或發熱體/產品旁邊使用及存放。同樣切勿放置在可被水濺到的地方使用及存放，以免破壞風扇及引起短路等意外。
- 切勿把易燃及爆炸性物品如石油、油漆或其他易燃物品放置在風扇附近位置；切勿在充滿易燃氣體的地方使用及存放風扇；切勿在風扇附近使用任何噴霧劑或殺蟲劑等，以免發生意外或破壞風扇。
- 切勿將手指或其他物品伸入前網和後網內或轉動部位，否則會造成重大傷害。特別注意兒童，防止他們做出此動作。
- 切勿在風扇上的任何縫隙及轉動位置等地方插入任何物件，以免損壞風扇或發生意外。
- 風扇運作時切勿用任何物品遮蓋前 / 後網。
- 風扇啟動時或轉動時，切勿調節風扇高度或上下風向角度，必須待風扇完全關機後才可進行調節。
- 本風扇只可放置在平坦穩固的地上使用，切勿用任何方法把風扇安裝在牆身或天花板上。
- 風扇啟動時注意切勿靠近前網和後網，以免頭髮被捲入風扇導致受傷。
- 風扇不要放置在靠近窗簾、枱布、衣物等地方使用，以免被吸入風扇，同樣亦注意避免讓紙張等物被吸入風扇，造成風扇破壞或發生意外。
- 切勿強行以人手轉動調節風扇左右風向角度，以免破壞風扇。
- 使用風扇期間不要移動風扇，移動風扇前必須先關掉風扇，把電插頭拔離電源插座，用機身背後的手挽提起風扇，切勿拖拉本風扇，以免破壞風扇及刮傷地面表面。

## 重要事項：

 
- 連接電源之前，請檢查本地的電源電壓是否與產品所標示的電壓相符。220V-240V ~50-60Hz
- 當插頭、電源線、風扇本身出現任何受損時，請即停止使用。盡快交往維修中心檢查，切勿自行改裝、拆卸或維修，以免發生意外。
- 不要擠壓、扭曲、拉扯電源線，以免電源線和插頭受損及鬆脫。電源線應遠離高溫表面。電源線如有受損請立即停止使用。切勿把電源線翹在風扇上，以免損壞電源線。




- 不要把電源線放在地毯底下或用任何物件覆蓋電源線，以免損傷電源線或引起火警。
- 電源線不可被任何物品踏過、重壓或被寵物咬破，以免損壞或折斷電源線，發生意外。
- 不要使用外接定時器連接本風扇。本風扇並非以外置時間設定的裝置操作。
- 使用風扇時切勿與其他電器共用同一電源座，以免電力過負發生意外。同時亦不要使用延長線及延長拖板連接風扇使用。
- 把風扇放置離開電視機、收音機或其他影音器材最少 1 米以外的地方使用，否則可能會對以上器材造成干擾。
- 請勿用濕手接觸電插頭、電源插座及使用風扇，以免發生觸電意外。
- 拆卸或安裝前網時如不慎把螺絲掉進風扇內，請把風扇交與維修中心處理，切勿自行拆卸處理。
- 使用風扇時需注意保持室內空氣流通，以免影響進風效果。
- 請勿長時間直接對着人體吹風，特別是長者、幼兒、病人和不能自行調節體溫人士等，否則對健康有影響問題。
- 不要在潮濕、多塵的環境及表面下使用此風扇，及不要把風扇放置在陽光直射的地方使用和存放。
- 不要對風扇進行任何沖擊及摔落，亦不要按壓前網和後網，以免造成風扇破壞及發生意外。
- 用戶應定期清潔機身、扇葉、前網及後網，以免積聚過多塵埃影響吹風效果。
- 進行風扇清潔、拆卸或安裝前，必須先把電源插頭拔離電源插座。
- 此風扇只供室內家庭使用及存放，不能作其他如商業用途及存放於室外。
- 如產品出現異常現象，如異味、冒煙、不正常聲響、過度發熱等情況，請立即把產品停止運作，拔掉電源插頭，停止使用。
- 遙控器使用一枚電池，如使用時發現遙控距離變短或控制不良，可能是電池開始耗盡，需要更換全新電池。
- 如長時間不使用風扇，請把遙控器內的電池取出放好，把風扇放回包裝盒內並存放在乾爽通風及不易被小孩或寵物接觸的位置。
- 所有圖片只供參考，一切以實物為準。

## 產品指示圖：

1. 前網裝飾蓋
2. 前網
3. 扇葉
4. 後網
5. 高度調節
6. 控制板面
7. 遙控器接收處

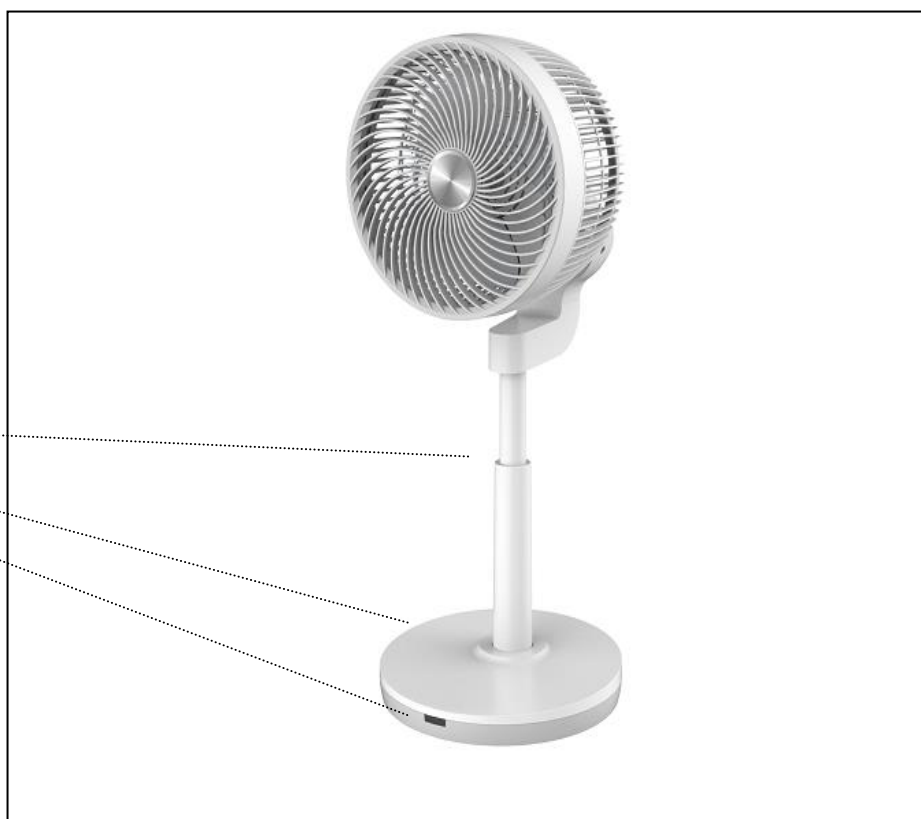

## 15. 控制板面按鍵指示圖：

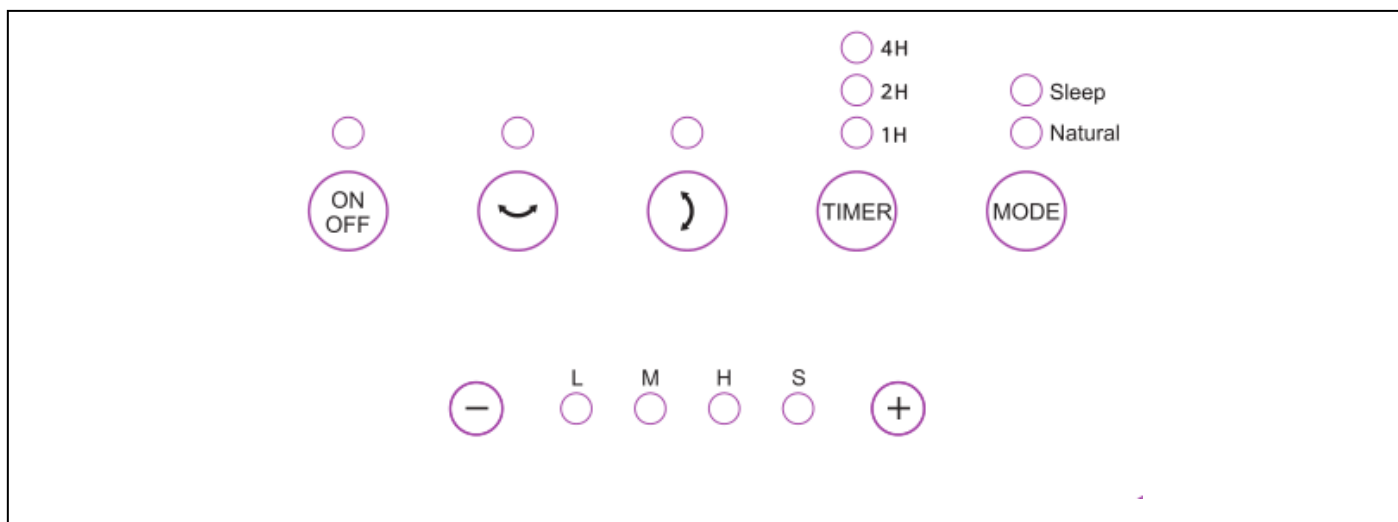 

### 控制鍵及旋鈕:

On / Off : 開 / 關



: 自動左右搖擺



: 自動上下搖擺

### TIMER 設定關機時間:

4H : 4 小時

2H : 2 小時

1H : 1 小時

### Mode 送風模式

Sleep : 睡眠模式

Nature : 自然模式

燈滅為正常模式

- : 調低風速

+ : 調高風速

## 第一次使用前：

1. 把風扇放置在平坦穩固的地上。
2. 移除所有包裝物料。
3. 確定產品電插頭沒有連接電源插座。
4. 檢查前網、後網、固定、扇葉等已安裝穩固。
5. 把遙控器上的電池絕緣片抽出。

## 使用方法：

### 特別注意：

- 使用前先細閱及了解警告和重要事項各點。
- 請勿長時間直接對着人體吹風，特別是長者、幼兒、病人和不能自行調節體溫人士等，否則對健康有影響問題。
- 本風扇並不防水，切勿把風扇放置在浴室、花灑、洗滌地方、泳池邊附近及室外使用及存放。
- 切勿將手指或其他物品伸入前網和後網內或轉動部位，否則會造成重大傷害。特別注意兒童，防止他們做出此動作。
- 沒有安裝或未完全安裝好扇葉、前 / 後網，切勿把電插頭連接電源插座啟動風扇，以免發生嚴重意外。
- 切勿在風扇上的任何縫隙及轉動位置等地方插入任何物件，以免損壞風扇或發生意外。
- 風扇啟動時或轉動時，切勿調節風扇高度或上下風向角度，必須待風扇完全關機後才可進行調節。
- 所有預設和設定的功能記憶會因風扇電插頭拔離電源插座或風扇斷電而取消。

把風扇放置在平坦穩固的地上，注意把電源線放在置好，切勿壓着電源線。

- 按下控制板面上或遙控器上的 ON / OFF 開 / 關鍵啟動風扇。第一次或重新連接電源插座後啟動時，風扇預設在正常模式，風速 1。
  - 開機後按“+/-”，風速在 2 檔→3 檔 (H)
  - ... 8 檔→7 檔→... 1 檔之間迴圈設定。
- 進行調節上下高度前需先把風扇停止運作，切勿在風扇啟動或搖擺時進行調節。
  - 切勿強行調節超過向上，以免破壞風扇。
- 調節時一手握穩支柱同時按緊高度調節按鈕。
  - 注意:
  - 進行調節上下風向角度前需先把風扇停止運作。
  - 任何時候如需停止使用風扇，按下控制板面上或遙控器上的 ON / OFF 開 / 關鍵關掉風扇。
- 如需設定定時關機時間，可於風扇啟動時按下控制板面上或遙控器上的 TIMER 定時關機鍵設定自動關機時間。自動關機時間最少可設定 1H(小時)至最多 7H(小時)。每按一下定時關機鍵增加 1 H(小時)，時間數值指示燈對應亮起。例如需設定 3H(小時)自動關機，按定時關機鍵 3 下，時間

數值指示燈的 1H 和 2H 亮起，表示已設定 3H(小時) 自動關機。設定至 7H(小時)後再按此鍵取消設定，所有時間數值指示燈熄滅。計時結束後風扇自動停止運作並進入備用狀態。

風扇在工作狀態下，長按” ON/OFF ” 鍵 3 秒，童鎖功能開啟，電源指示燈熄滅，其他功能的燈保持原有設定狀態，此時主板按鍵和遙控器按鍵都無效，只有需取消童鎖後，才能恢復正常工作。

風扇在上電待機狀態下，長按” ON/OFF ” 鍵 3 秒無效，不能進入童鎖功能。

## 清潔及保養：

注意:

- 本風扇並不防水，切勿把風扇整機、遙控器、電源線和電插頭浸在水中或任何液體裏，也不可將其放在水龍頭下沖洗和被濺水，以免發生意外。風扇機身外殼只能以乾軟布清潔。
- 進行風扇清潔、拆卸或安裝前，必須先把電源插頭拔離電源插座。
- 不可用百潔布或鋼絲圈等硬物刷刮風扇，以免破壞風扇。
- 切勿以汽油、稀釋劑或任何腐蝕性物質清潔風扇表面。
- 如長時間不使用風扇，請把遙控器內的電池取出放好，把風扇放回包裝盒內並存放在乾爽通風及不易被小孩或寵物接觸的位置。
- 請定期清潔風扇機身、扇葉、前網及後網，以免積聚過多塵埃影響吹風效果。

### 拆除前 / 後網和扇葉清潔:

1. 把風扇轉至正面，然後關機，把電插頭拔離電源插座，調節風扇至最低高度。
2. 用螺絲批把前網正下方底部的螺絲轉出放好。一手握緊上下風向調節架，另一手握緊前網，然後用微力把前網轉動，取出前網
3. 握穩扇葉，把扇葉固定帽以順時針方向擰開取出。  
握穩扇葉中間位置，把扇葉向前取出。
4. 扇葉、前 / 後網可用乾軟布清潔表面灰塵。
6. 風扇機身和遙控器可用乾軟布清潔表面灰塵。
7. 完成清潔和待所有部件完全乾透後，可以開始安裝。

◆ 使用前請仔細閱讀使用說明書，並妥善保存。

◆ 為了提升產品品質,本公司保留更改資訊或參數的最後決定權利

◆ 本資料上如有任何印刷錯漏或修改內容,本公司保留解釋權

## 產品規格:

型號: EJF 7981V

功率: 30W

電壓: 220-240V~

頻率: 50-60Hz

配件: 遙控器

## **Product Warranty**

The Warranty Card is not provided in the product packaging. You can register the product warranty online at our website <https://www.europace.com.sg/ewarranty/> within 7 (seven) days from the date of purchase. You will enjoy an additional 3 months of the product standard warranty when you register online. Please produce your E-warranty registration when requesting for repair and service at our Service Centres nearest to you.

In the event, if you are unable to register the product warranty online you must produce your purchase receipt/tax invoice and such other documentary proof of purchase of the appliance when requesting for repair and service.

### **Product Warranty Coverage**

You may find out your product warranty coverage at the link below before calling our Customer Service Hotline (65) 6457 3678 or visiting our Service Centre.

[http://europace.com.sg/ewarranty/src/cupload/settings\\_pdf/1/1-1-2c899-1563960978-WARRANTY-COVERAGE-19\\_0221.pdf](http://europace.com.sg/ewarranty/src/cupload/settings_pdf/1/1-1-2c899-1563960978-WARRANTY-COVERAGE-19_0221.pdf)

### **TERMS & CONDITIONS OF WARRANTY (THIS WARRANTY IS VALID IN SINGAPORE ONLY)**

Your appliance is warranted against faulty design, workmanship or materials for a period of 12 months unless otherwise stated from the date of purchase, subject to the following terms & conditions herein below:-

- 1) That the owner shall register the product warranty online at our website [www.europace.com.sg](http://www.europace.com.sg) within 7 (seven) days from the date of purchase.
- 2) That the appliance shall be used solely for domestic purposes and not for commercial purposes or any other purposes whatsoever and used strictly under the instruction for operation as provided by the manufacturers or the appliance.
- 3) That if any time during the warranty period any part or parts of this appliance is removed, tampered, modified, adjusted, altered, handled or repaired in any way whatsoever by any persons other than those authorized by Strategic Marketing (S) Pte Ltd, this warranty shall immediately cease to be valid and become void.
- 4) That the owner shall produce the E-warranty registration or tax invoice/receipt and such other documentary proof of purchase of the appliance to our satisfaction as we may deem necessary when requesting for repair and service.
- 5) That our decision on all queries relating to complaints as to defects either of workmanship or of materials shall be conclusive and the owner shall agree to abide by such a decision. Any appliance or defective part which has been replaced shall become our property.
- 6) The terms and conditions of this warranty shall be contained exclusively in this document and no other presentation of provision, either written or otherwise, regardless of the origin of the same, shall be accepted as either adding or removing from these terms and conditions.
- 7) That this warranty shall cease to be valid and void if the appliance is exported or relocated from Singapore.
- 8) That there shall be no removal, alteration, defacement, or made illegible/tampered or any kind of the serial number on the appliance.
- 9) That the owner shall be fully responsible for the due delivery and collection of the appliance for any work done according to this warranty. Transportation expenses incurred for delivery or handling the appliance are chargeable to the owner.
- 10) Transportation and labour charges apply after the full parts warranty expires. Refer to <https://www.europace.com.sg/ewarranty/> for more information.

In addition to the above, this warranty shall be subjected to the following limitations and exclusions:-

a) The appliance shall be warranted by STRATEGIC MARKETING (S) PTE. LTD. from date of purchase only for a period of:-

10 years - Heating Element warranty applies to selected models of Storage Water Heaters.

- Tank Leakage warranty applies to selected models of Storage Water Heaters.

8 years - Motor warranty applies only to selected models of Stand Fans (Walk-in warranty).

10 years - Compressor warranty applies to selected models of Refrigerators.

6 years - Motor warranty applies only to selected models of Stand Fans (Walk-in warranty).

- Compressor warranty applies only to selected models of System Air Conditioners and Portable Air Conditioners.

5 years - Compressor warranty applies to Refrigerators, Freezers, Wine Coolers, Portable Air Conditioners & Casement Air Conditioners (Outdoor warranty). Transportation is chargeable from the 2nd year to 5th year.

- Compressor warranty applies to Dehumidifiers (Walk-in warranty)

- Motor warranty applies only to selected models of Stand Fans (Walk-in warranty).

3 years - Full parts warranty applies only to selected models of Air Purifiers & selected models of Dehumidifiers (Walk-in warranty).

- Heating Element warranty applies only to selected models of Garment Steamers (Walk-in warranty).

- Motor warranty applies only to selected models of Jet Turbine Fans & selected models of Air Coolers (Walk-in warranty).

2 years - Motor and internal parts warranty applies only to selected models of Stand Fans, selected models of Oscillation Power Fans & selected models of Air Purifiers (Walk-in warranty).

- Heating Element warranty applies to selected models of Electric Ovens & selected models of Kettle Jugs. (Walk-in warranty)

- Motor warranty applies only to selected models of Jet Turbine Fans (Walk-in warranty).

- Full parts warranty applies only to Wine Coolers of 34 Bottles & above.

1 year - Full parts warranty applies to \*Lifestyle Products (cash & carry items), Small Kitchen Appliances, Fans, Air Coolers, Wine Coolers of 20 Bottles & below, Mini Bar Fridge (Walk-in warranty)

- Full parts warranty apply to Refrigerators, Air Conditioners & Freezers (Outdoor warranty).

Check out the warranty coverage of your appliance at [www.europace.com.sg](http://www.europace.com.sg)

b) The owner waives all or any claims to compensation monetary or otherwise which he/she may be entitled to and shall agree to accept any compensation whatsoever by way of additional repairs or otherwise which we in our absolute discretion may deem fit to offer. The giving of compensation shall be subjected to the other provisions of the warranty.

c) This warranty shall not be transferable, negotiable or assignable to any third party.

d) The warranty does not include transport delivery or handling charges incurred in the transportation of the appliance to and from Strategic Marketing (S) Pte Ltd.

e) Damage caused during transit where the appliance is transported for servicing, repair, or in relation thereof or connection therewith.

f) In respect of refrigerator and air conditioner only, upon the expiry of 12 months from the date of purchase, this warranty will not cover transport, refrigerant and labour to install a new compressor.

g) This warranty will not cover chemical cleaning, maintenance service, general service and overhaul, which if confirm is chargeable.

h) Defects or fault in the appliance which has been used for commercial purposes or which have been rented/leased or which have been otherwise subject to other than household use.

i) Claims for damaged/missing parts after 3 days from the original date of goods received will not be valid.

j) This warranty and the Replacement Scheme does not particularly cover damages and/or defects arising from

- Usage of wrong electrical supply/voltage.
- Usage not according to the Instruction Manual provided by the manufacturers.
- Misuse, accidents, negligence, abuse, improper installation, or any manner of tampering.
- Normal wear and tear.
- Corrosions rusting or stains.
- Scratches, dents on the unit body, casing or paintwork of the appliance.
- Act of God, fire, flood and civil unrest.
- We shall not under any obligation, legal or otherwise to repair this appliance or one to one exchange if the same shall be required as a result of losses, damages, and malfunctions arising from any of the causes mentioned in the paragraph.

k) All accessories, external parts and extruded parts such as front panel, casing, door, glass cover, glass door, cable/cord assembly, batteries, adaptor, plug, remote control, control knob, buttons, filter, UV lamp, oven tray, wooden rack, exhaust hose, fixtures, panels, cover, lid and lever, plastic parts, fan blades, blade guard, inner pots, brushes, water tanks, attachments made of glass, plastic and/or porcelain, detachable parts, and other option items are excluded from this warranty.

All services provided after the warranty period will be chargeable at standard rates determined by STRATEGIC MARKETING (S) PTE. LTD.

The terms and conditions of this warranty shall be varied except with the written and express consent or agreement of Strategic Marketing (S) Pte. Ltd. While Strategic Marketing (S) Pte. Ltd. endeavours to repair any defects after the warranty period, it is subject to availability.

It is hereby expressly provided that any liability of Strategic Marketing (S) Pte. Ltd. for any loss or damage whatsoever arising from, relating to or in connection with the purchase of the appliance shall not exceed the purchase price (excluding installation costs) of the appliance. Similarly, Strategic Marketing (S) Pte. Ltd.'s liability for any breach of this warranty shall be limited to the purchase price (excluding installation costs) of the appliance.

\* Lifestyle Products - Garment Steamer, Humidifier, Dehumidifier, Air Purifier, Mini Bar-Fridge.

\* Walk-in warranty - Customers are obliged to bring the warranted products to Strategic Marketing (S) Pte. Ltd. Service Centre for repair/service during the warranty period.



**Scan QR Code for  
the online Warranty  
Registration**

Ver. 20 \_0312



For more technical details / enquiries, please visit:

## **EUROPACE SERVICE CENTER**

**10 Changi South Street 3 #06-01 Singapore 486147**

Tel: (65) 6457 3678 | Fax: (65) 6741 0728

Operating Hours: Monday-Friday: 9am - 5pm | Saturday: 9am - 12pm

Email: [service@strategic.com.sg](mailto:service@strategic.com.sg)

[www.europace.com.sg](http://www.europace.com.sg) | [www.strategic.com.sg](http://www.strategic.com.sg)

### **RELATED PRODUCTS & MAIN CONTACT HOTLINE**

System Split Aircons | Tel: 6858 0801 | Email: [systemac@strategic.com.sg](mailto:systemac@strategic.com.sg) (Twin City)

Portable & Casement Aircons | Tel: 6291 0800 | Email: [portableac@strategic.com.sg](mailto:portableac@strategic.com.sg) (Jia Yue)

Refrigerators, Washing machines, Cookers & other major appliances |

Tel: 6289 0802 | Email: [mda@strategic.com.sg](mailto:mda@strategic.com.sg) (TnG)

*Celebrate Fine Living!*

This product is distributed by Strategic Marketing (S) Pte Ltd

If there is any technical amendment for the product, it will be edited on the updated version of the instruction manual without prior notice. The pictures shown in the instruction manual is only for illustration purpose only. If the appearance or colour of the product is modified, please refer to the actual appliance as a standard.