



Electric Steamboat with BBQ Grill ESB 88P

Instruction Manual

Thank you for purchasing Electric Steamboat with BBQ Grill
For safety purpose, please read this operating instruction manual carefully before using
and keep it for future reference.



RELISHING YOUR COOKERY
Celebrate Fine Living!



SAFETY INSTRUCTIONS


Read the below instructions in particular very carefully.

- 1.Ensure the local voltage fit to the appliance and the socket must be grounded.
- 2.Make sure the appliance and the plug do not come into contact with water or any other liquid. In case if the appliance be dropped in water Inadvertently, remove the plug from the electrical socket immediately and have the appliance checked by a certified professional. Non-compliance with this may result in serious injury.
- 3.To prevent electrical shock, do not immerse the appliance, plug or power cord into water or liquid.
- 4.Never switch on the appliance with an empty pan on top of it; this may result in serious damage to the appliance.
- 5.Operate the appliance on flat and dry place.
- 6.Unplug from outlet completely when not in use or before cleaning.
- 7.Make sure the outer surface of the pot and the heater is clean and dry before plug in.
- 8.Make sure the pot is place levelly, seated in the middle of the heater and touching the heating plate tightly, before cooking.
- 9.Do not place objects near, cover or touch the hot steam vent of the glass lid while cooking.
- 10.The appliance is only used for the purpose it was designed for.
- 11.Do not put the pot on any other stove to heat.
- 12.Do not touch any surfaces when hot.
- 13.Not for outdoor use.
- 14.Do not place on or near a hot gas or electric burner, or in a heated oven.
- 15.Close supervision is required when this appliance is used by or near children.
- 16.Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to our service centre for examination, repair or adjustment.
- 17.Do not let power cord hang over edge of table or counter where it can be pulled on by children or tripped over.
- 18.This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge,unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 19.Children should be supervised to ensure that they do not play with the appliance.

TECHNICAL PARAMETERS

MODEL NO.	VOLTAGE	FREQUENCY	POWER CONSUMPTION	HOT POT
ESB 88P	220V-240V~	50/60Hz	1400W	3.0L

COMPONENTS

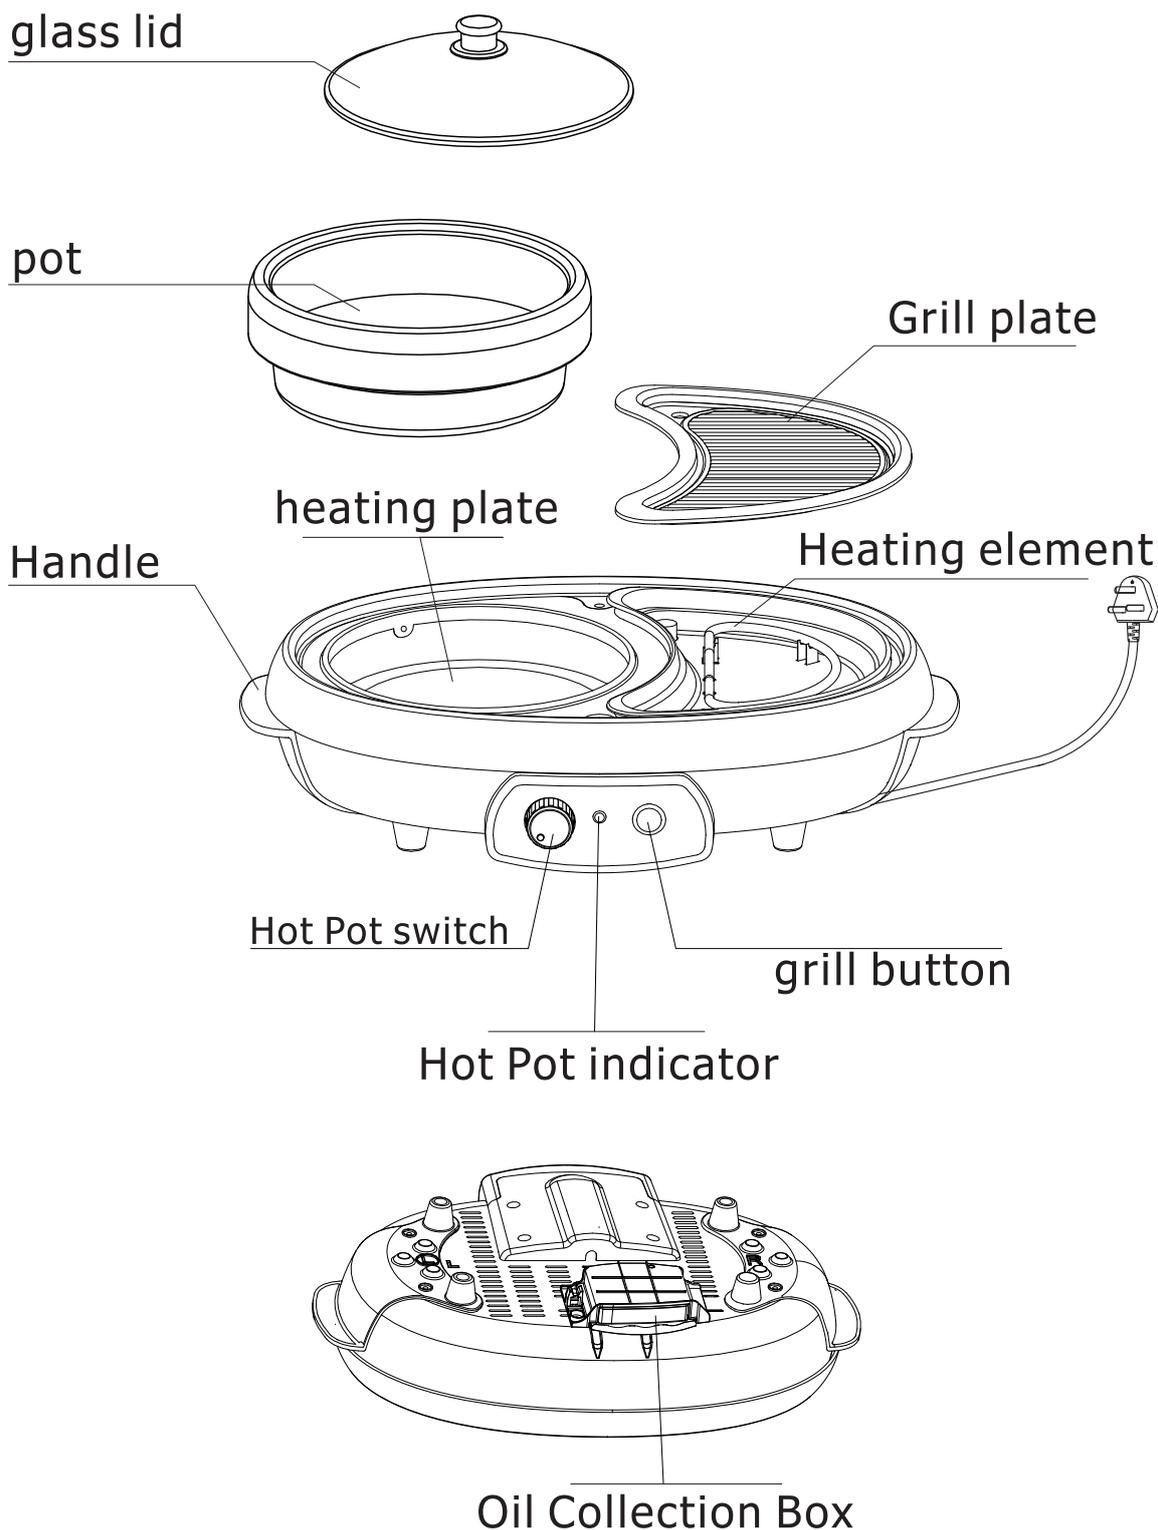

PREPARATION FOR FIRST USE:

1. Check to make sure the appliance is undamaged. In case of any damage, immediately contact your supplier and do not use the appliance.
2. Remove all packaging material.
3. Clean the pot, grill plate and glass lid with warm water and mild washing liquid. Rinse thoroughly.
4. Position the appliance in such a way that the plug is accessible all times.
5. For initial use, some smoke and smell may be found when the unit is turned on, it is normal and will disappear after using several times.

USAGE:

1. Before each operation, check if there are any articles on the surface of the heat plate, remove it if there is any. Ensure the surface of the heat plate clean and dry.
2. Place the pot levelly on the heating base, and seated in the middle of the heater. Add soup (water) into the pot and cover the lid.
3. Turn the switch knob to the "OFF" position, and then insert the plug into the socket. Must fully insert it into the socket.
4. Turn the knob to "HIGH" mode, the indicating light will light up implying that the appliance is working with full power.

NOTE: After the water or soup starts boiling, turn the knob counter-clockwise from "MEDIUM" to "LOW", the indicating light will turn off once the water temperature reaches the desired degree; The heating will resume when the water temperature falls below the desired temperature; the indicating light will therefore light up again.

5. Add the food to the pot as soon as the water or soup starts to boil.
6. After using, turn the knob counter-clockwise to the end position "OFF" to ensure the power is off.

Usage of Grill plate:

1. Put the grill plate on top of the heating plate and ensure it is in the right position.
2. Press the grill button to the "OFF" position, and then insert the plug into the socket. Must fully insert it into the socket.
3. Press the grill button to the "ON" position, the light is on to indicate that the appliance is working with full power.
4. Add food on the grill plate after it had heated up.
NOTE: Please reverse food when you grill to avoid scorched or incomplete of food.
5. After using,press the grill button to"OFF"position to ensure the power is off.
6. The excess oil on the grill plate would be collected in the oil collection box, please clean it after every use (please remove the oil collection box when the product is completely cool down).

CLEANING AND MAINTENANCE:

- a)Before cleaning the appliance make sure you remove the plug from the main socket.
- b)Clean the pot, grill plate,oil collection box, and glass lid with water and sponge.
- c)Wipe the heating base with a damp cloth. Do not wash the heating base in water.
- d)Dry before storing.


一、产品特点：

- 1、在设计和造型方面，融合中西饮食文化的精华；
- 2、火锅和烤盘均带有温控器和开关，可同时或单独使用；
- 3、不锈钢火锅胆配玻璃盖，不粘涂层烤盘卫生美观，持久耐用；
- 4、组合式的结构，火锅、烤盘可与热源座分离，方便清洗和使用；
- 5、锅体采用食品级SUS304不锈钢材质。

二、产品的技术参数：

型号	额定电压	额定频率	额定功率	火锅容量
KL-C50/SG	220V-240V-	50Hz	1400W	3.0L

三、产品的结构：

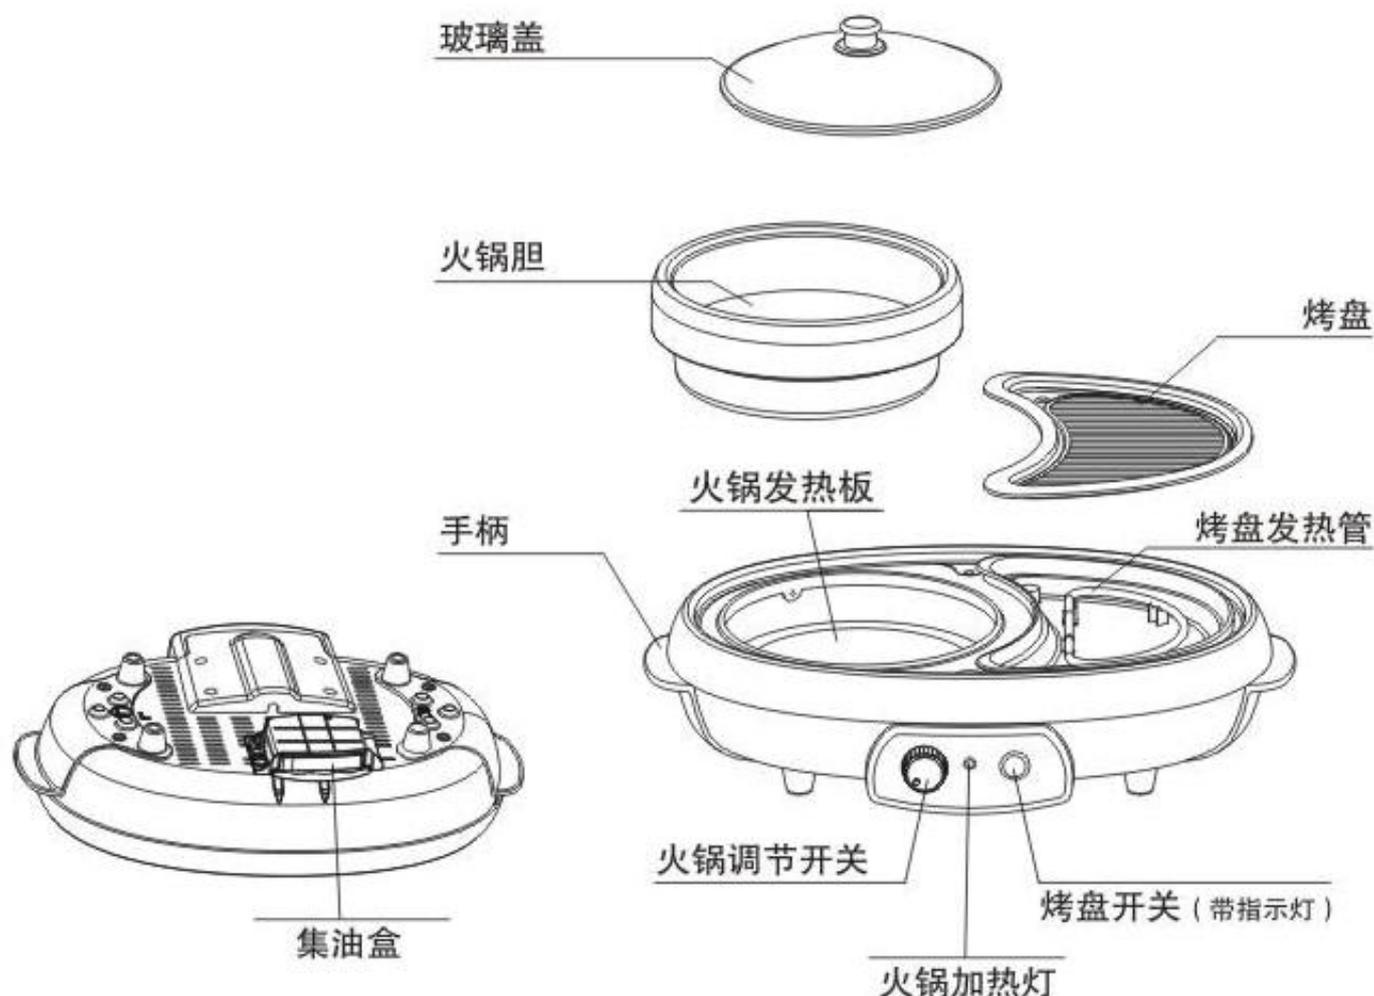

四、使用方法：

- 1、每次使用前，请检查产品的发热板表面，如有异物应予清除。
- 2、将火锅胆套于火锅发热板上，再放入清水，稍旋转使锅底与发热板表面更好接合，然后盖上玻璃盖；再将烤盘套放于烤盘发热管上，亦稍转动使配合到位。
- 3、将插头插入电源座内，顺时针旋转温控旋钮和按下烤盘开关，火锅加热指示灯和烤盘开关指示灯亮，分别表示火锅和烤盘正在加热。
- 4、烤盘加热一段时间后，在烤盘上加入适量食用油后就可以进行煎烤。
- 5、使用过程中，可按需要盖上或打开玻璃盖（注意：勿使汤料过分沸腾溢出锅外）。应常搅拌以免食物粘底；烤盘上视需要添补食用油。
- 6、使用完毕后，把两个开关调整至“关”的位置把电源插头拔下。
- 7、产品的清洗：关闭电源待锅体冷却后（约30分钟），把火锅胆和烤盘端离热源座，浸入水中清洗，洗净后用布抹干或晾干。
- 8、烤盘上多余的油会流入底部的集油盒内，每次用完后，请把油清理掉（必须等产品充分冷却后再抽出集油盒）。

五、注意事项：

- 1、请爱护烤盘涂层，勿使用金属利器刮削，清洗时不可以长期浸泡；
- 2、不得把热源座浸入水中清洗；
- 3、请勿把火锅胆放在煤气灶上或其它热源上加热以防锅底变形，也不可热源座空烧；
- 4、在不使用时，请将电源插头拔下；
- 5、贮藏在干燥的地方，注意保护产品，勿让其潮湿和磕（撞）碰；
- 6、如果电源软线损坏，为避免危险，必须由制造厂或其维修部或类似的专职人员来更换。
- 7、本器具不预备给体能弱、反应迟缓或有精神障碍的人（包括儿童）使用，除非在对其负有安全责任的人员的指导或帮助下安全使用。
- 8、儿童应该被监督，以保证他们不玩耍器具。
- 9、本器具不能在外接定时器或独立的遥控控制系统的方式运行。

Product Warranty

The Warranty Card is not provided in the product packaging. You can register the product warranty online at our website <https://www.europace.com.sg/ewarranty/> within 7 (seven) days from the date of purchase. You will enjoy an additional 3 months of the product standard warranty when you register online. Please produce your E-warranty registration when requesting for repair and service at our Service Centres nearest to you.

In the event, if you are unable to register the product warranty online you must produce your purchase receipt/tax invoice and such other documentary proof of purchase of the appliance when requesting for repair and service.

Product Warranty Coverage

You may find out your product warranty coverage at the link below before calling our Customer Service Hotline (65) 6457 3678 or visiting our Service Centre.

http://europace.com.sg/ewarranty/src/cupload/settings_pdf/1/1-1-2c899-1563960978-WARRANTY-COVERAGE-19_0221.pdf

TERMS & CONDITIONS OF WARRANTY (THIS WARRANTY IS VALID IN SINGAPORE ONLY)

Your appliance is warranted against faulty design, workmanship or materials for a period of 12 months unless otherwise stated from the date of purchase, subject to the following terms & conditions herein below:-

- 1) That the owner shall register the product warranty online at our website www.europace.com.sg within 7 (seven) days from the date of purchase.
- 2) That the appliance shall be used solely for domestic purposes and not for commercial purposes or any other purposes whatsoever and used strictly under the instruction for operation as provided by the manufacturers or the appliance.
- 3) That if any time during the warranty period any part or parts of this appliance is removed, tampered, modified, adjusted, altered, handled or repaired in any way whatsoever by any persons other than those authorized by Strategic Marketing (S) Pte Ltd, this warranty shall immediately cease to be valid and become void.
- 4) That the owner shall produce the E-warranty registration or tax invoice/receipt and such other documentary proof of purchase of the appliance to our satisfaction as we may deem necessary when requesting for repair and service.
- 5) That our decision on all queries relating to complaints as to defects either of workmanship or of materials shall be conclusive and the owner shall agree to abide by such a decision. Any appliance or defective part which has been replaced shall become our property.
- 6) The terms and conditions of this warranty shall be contained exclusively in this document and no other presentation of provision, either written or otherwise, regardless of the origin of the same, shall be accepted as either adding or removing from these terms and conditions.
- 7) That this warranty shall cease to be valid and void if the appliance is exported or relocated from Singapore.
- 8) That there shall be no removal, alteration, defacement, or made illegible/tampered or any kind of the serial number on the appliance.
- 9) That the owner shall be fully responsible for the due delivery and collection of the appliance for any work done according to this warranty. Transportation expenses incurred for delivery or handling the appliance are chargeable to the owner.
- 10) Transportation and labour charges apply after the full parts warranty expires. Refer to <https://www.europace.com.sg/ewarranty/> for more information.

In addition to the above, this warranty shall be subjected to the following limitations and exclusions:-

a) The appliance shall be warranted by STRATEGIC MARKETING (S) PTE. LTD. from date of purchase only for a period of:-

10 years - Heating Element warranty applies to selected models of Storage Water Heaters.

- Tank Leakage warranty applies to selected models of Storage Water Heaters.

8 years - Motor warranty applies only to selected models of Stand Fans (Walk-in warranty).

10 years - Compressor warranty applies to selected models of Refrigerators.

6 years - Motor warranty applies only to selected models of Stand Fans (Walk-in warranty).

- Compressor warranty applies only to selected models of System Air Conditioners and Portable Air Conditioners.

5 years - Compressor warranty applies to Refrigerators, Freezers, Wine Coolers, Portable Air Conditioners & Casement Air Conditioners (Outdoor warranty). Transportation is chargeable from the 2nd year to 5th year.

- Compressor warranty applies to Dehumidifiers (Walk-in warranty)

- Motor warranty applies only to selected models of Stand Fans (Walk-in warranty).

3 years - Full parts warranty applies only to selected models of Air Purifiers & selected models of Dehumidifiers (Walk-in warranty).

- Heating Element warranty applies only to selected models of Garment Steamers (Walk-in warranty).

- Motor warranty applies only to selected models of Jet Turbine Fans & selected models of Air Coolers (Walk-in warranty).

2 years - Motor and internal parts warranty applies only to selected models of Stand Fans, selected models of Oscillation Power Fans & selected models of Air Purifiers (Walk-in warranty).

- Heating Element warranty applies to selected models of Electric Ovens & selected models of Kettle Jugs. (Walk-in warranty)

- Motor warranty applies only to selected models of Jet Turbine Fans (Walk-in warranty).

- Full parts warranty applies only to Wine Coolers of 34 Bottles & above.

1 year - Full parts warranty applies to *Lifestyle Products (cash & carry items), Small Kitchen Appliances, Fans, Air Coolers, Wine Coolers of 20 Bottles & below, Mini Bar Fridge (Walk-in warranty)

- Full parts warranty apply to Refrigerators, Air Conditioners & Freezers (Outdoor warranty).

Check out the warranty coverage of your appliance at www.europace.com.sg

b) The owner waives all or any claims to compensation monetary or otherwise which he/she may be entitled to and shall agree to accept any compensation whatsoever by way of additional repairs or otherwise which we in our absolute discretion may deem fit to offer. The giving of compensation shall be subjected to the other provisions of the warranty.

c) This warranty shall not be transferable, negotiable or assignable to any third party.

d) The warranty does not include transport delivery or handling charges incurred in the transportation of the appliance to and from Strategic Marketing (S) Pte Ltd.

e) Damage caused during transit where the appliance is transported for servicing, repair, or in relation thereof or connection therewith.

f) In respect of refrigerator and air conditioner only, upon the expiry of 12 months from the date of purchase, this warranty will not cover transport, refrigerant and labour to install a new compressor.

g) This warranty will not cover chemical cleaning, maintenance service, general service and overhaul, which if confirm is chargeable.

h) Defects or fault in the appliance which has been used for commercial purposes or which have been rented/leased or which have been otherwise subject to other than household use.

i) Claims for damaged/missing parts after 3 days from the original date of goods received will not be valid.

j) This warranty and the Replacement Scheme does not particularly cover damages and/or defects arising from

- Usage of wrong electrical supply/voltage.
- Usage not according to the Instruction Manual provided by the manufacturers.
- Misuse, accidents, negligence, abuse, improper installation, or any manner of tampering.
- Normal wear and tear.
- Corrosions rusting or stains.
- Scratches, dents on the unit body, casing or paintwork of the appliance.
- Act of God, fire, flood and civil unrest.
- We shall not under any obligation, legal or otherwise to repair this appliance or one to one exchange if the same shall be required as a result of losses, damages, and malfunctions arising from any of the causes mentioned in the paragraph.

k) All accessories, external parts and extruded parts such as front panel, casing, door, glass cover, glass door, cable/cord assembly, batteries, adaptor, plug, remote control, control knob, buttons, filter, UV lamp, oven tray, wooden rack, exhaust hose, fixtures, panels, cover, lid and lever, plastic parts, fan blades, blade guard, inner pots, brushes, water tanks, attachments made of glass, plastic and/or porcelain, detachable parts, and other option items are excluded from this warranty.

All services provided after the warranty period will be chargeable at standard rates determined by STRATEGIC MARKETING (S) PTE. LTD.

The terms and conditions of this warranty shall be varied except with the written and express consent or agreement of Strategic Marketing (S) Pte. Ltd. While Strategic Marketing (S) Pte. Ltd. endeavours to repair any defects after the warranty period, it is subject to availability.

It is hereby expressly provided that any liability of Strategic Marketing (S) Pte. Ltd. for any loss or damage whatsoever arising from, relating to or in connection with the purchase of the appliance shall not exceed the purchase price (excluding installation costs) of the appliance. Similarly, Strategic Marketing (S) Pte. Ltd.'s liability for any breach of this warranty shall be limited to the purchase price (excluding installation costs) of the appliance.

* Lifestyle Products - Garment Steamer, Humidifier, Dehumidifier, Air Purifier, Mini Bar-Fridge.

* Walk-in warranty - Customers are obliged to bring the warranted products to Strategic Marketing (S) Pte. Ltd. Service Centre for repair/service during the warranty period.



**Scan QR Code for
the online Warranty
Registration**

Ver. 20 _0312

For more technical details / enquiries, please visit:

EUROPACE SERVICE CENTER

10 Changi South Street 3 #06-01 Singapore 486147

Tel: (65) 6457 3678 | Fax: (65) 6741 0728

Operating Hours: Monday - Friday: 9am - 5pm | Saturday: 9am - 12pm

Email: service@strategic.com.sg

www.europace.com.sg | www.strategic.com.sg

RELATED PRODUCTS & MAIN CONTACT HOTLINE

System Split Aircons | Tel: 6858 0801 | Email: systemac@strategic.com.sg (Twin City)

Portable & Casement Aircons | Tel: 6291 0800 | Email: portableac@strategic.com.sg (Jia Yue)

Refrigerators, Washing machines, Cookers & other major appliances |

Tel: 6289 0802 | Email: mda@strategic.com.sg (TnG)

Celebrate Fine Living!

This product is distributed by Strategic Marketing (S) Pte Ltd

If there is any technical amendment for the product, it will be edited on the updated version of the instruction manual without prior notice. The pictures shown in the instruction manual is only for illustration purpose only. If the appearance or colour of the product is modified, please refer to the actual appliance as a standard.